



# Dell Venue 8 7840 Battery Replacement

Replacing the battery on your Dell Venue 8 7840

Written By: Donnelle January



## INTRODUCTION

Is your tablet not charging correctly? This guide will show you how to replace your tablet's battery.

---



### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Screen



- ⚠ Make sure your device is turned off. Leaving it turned on may cause an electric shock.
- Face the device with the screen towards you.

## Step 2

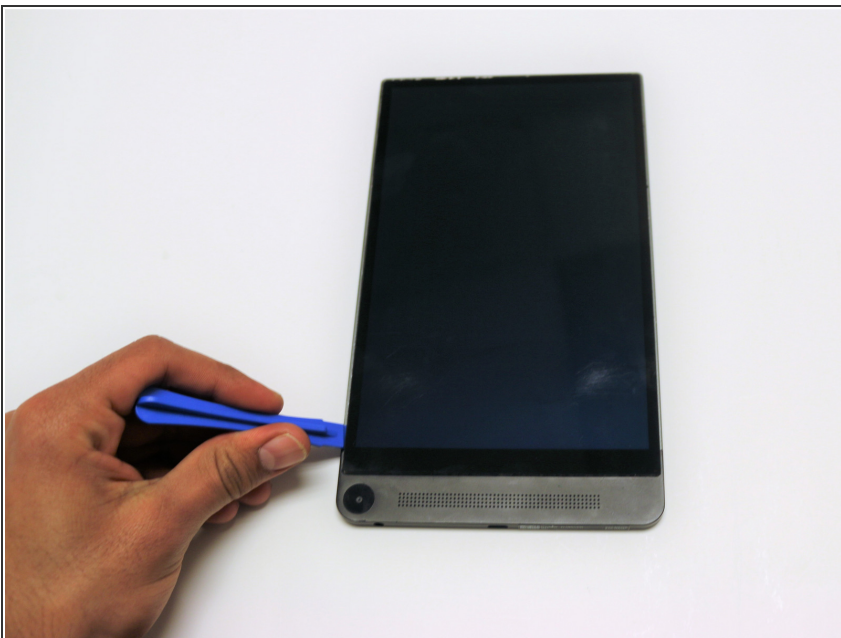

- With a plastic opening tool, pry open the bottom right corner of the screen.
- ⓘ The screen is tightly attached to the tablet, so you may have to use a metal spudger to pry it open if the plastic spudger does not do the task.



### Step 3



- Next, pry open the top left corner of the screen.

### Step 4



- Then, pry open the top right corner of the screen.

## Step 5




- Lastly, pry open the bottom right corner of the screen.


## Step 6



- Once you have pried open all the corners of the tablet, carefully open the screen from the right side of the tablet.


 Do not try and open the screen from the left side of the tablet, because the screen is attached on the left side of the tablet; doing this can damage the tablet.

## Step 7

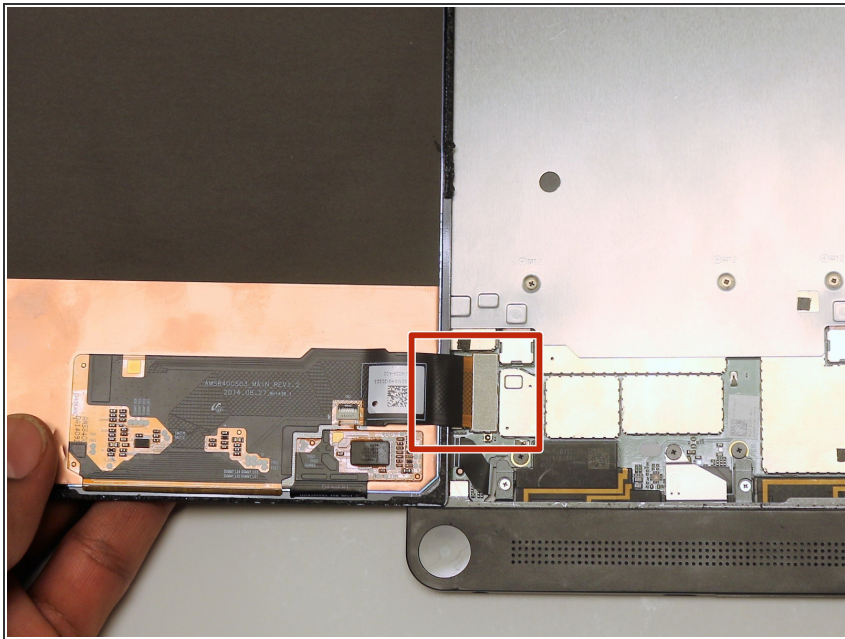

- Once the tablet is opened, locate the connector.


## Step 8

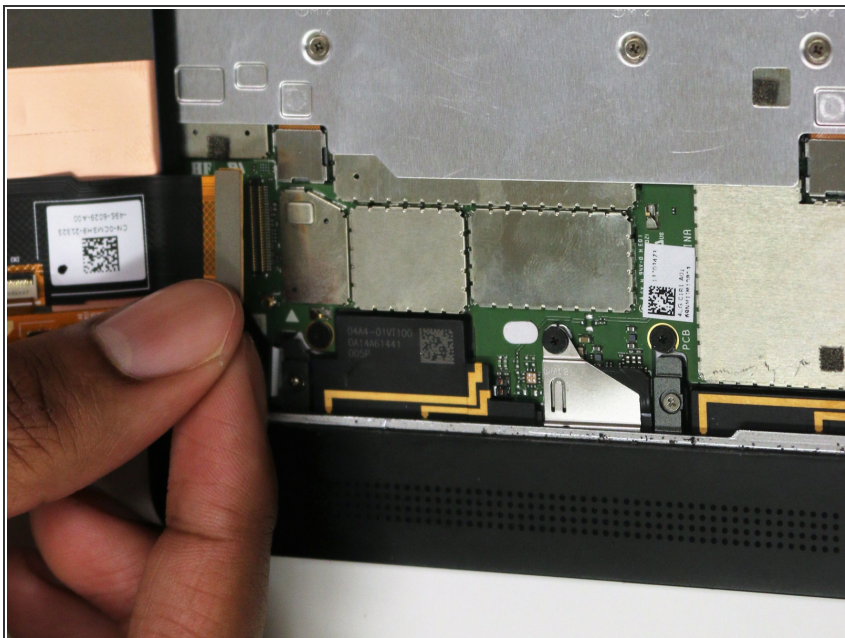

- Disconnect the connector from the tablet.



## Step 9 — Battery

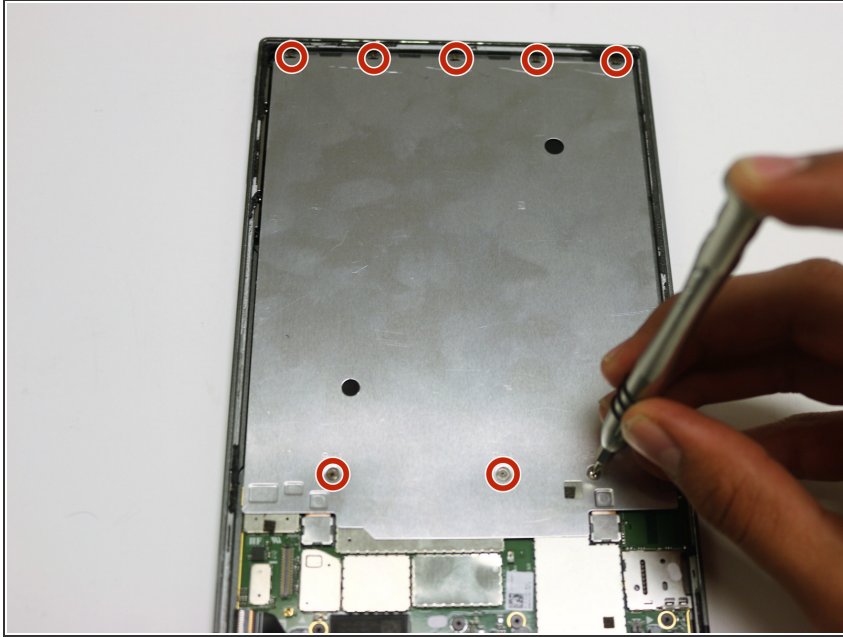

- Unscrew the eight 7 mm Philips #1 screws.

**i** After the screws are unscrewed, you can take off the silver cover.

## Step 10



- Using tweezers, disconnect the battery from the tablet.

**i** After disconnecting the battery, you can remove the battery from the tablet.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 04:50:14 AM.